

FIG. 1

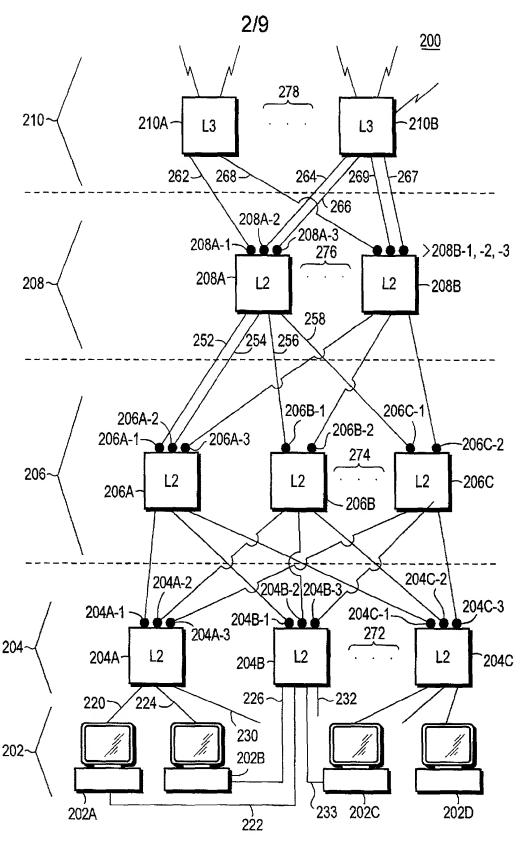


FIG. 2

 $\dot{-}$ 


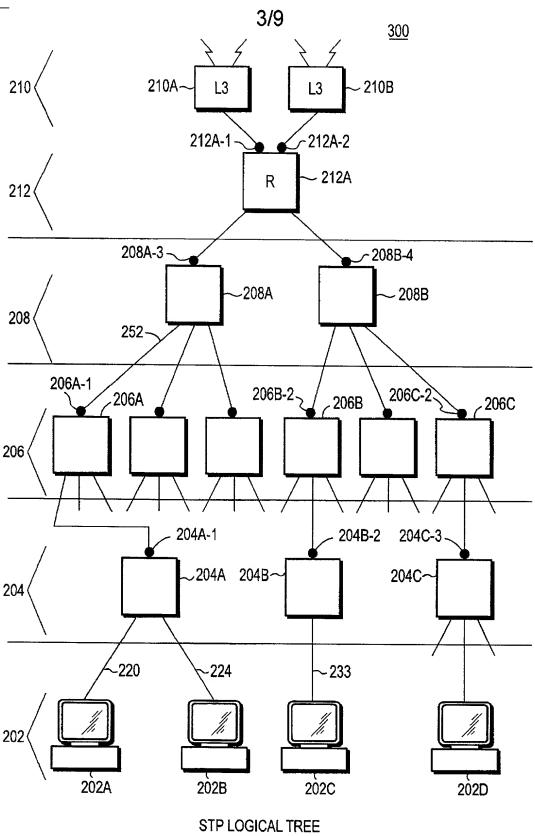


FIG. 3


-

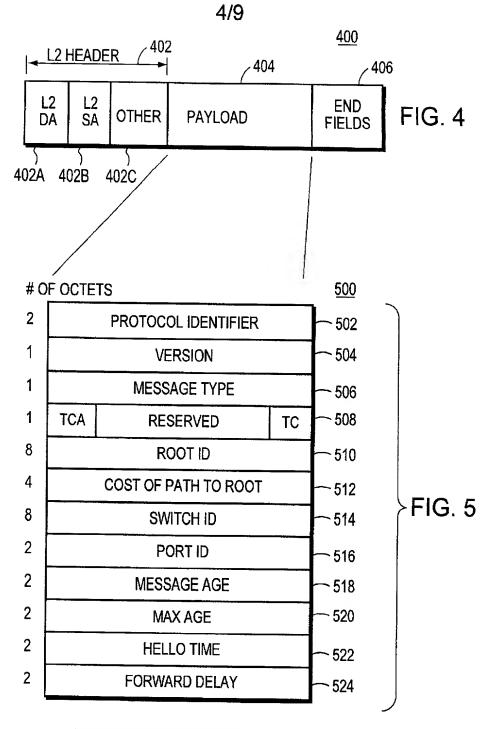

**CONFIGURATION MESSAGE** 

+

<u>600</u>

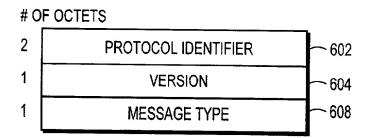


TOPOLOGY CHANGE NOTIFICATION MESSAGE

FIG. 6

\_

<u>700</u>

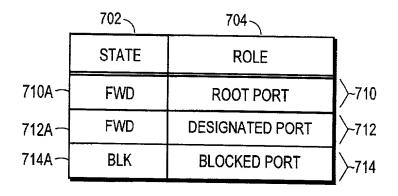

PORT STATE TABLE PRIOR ART

FIG. 7

i

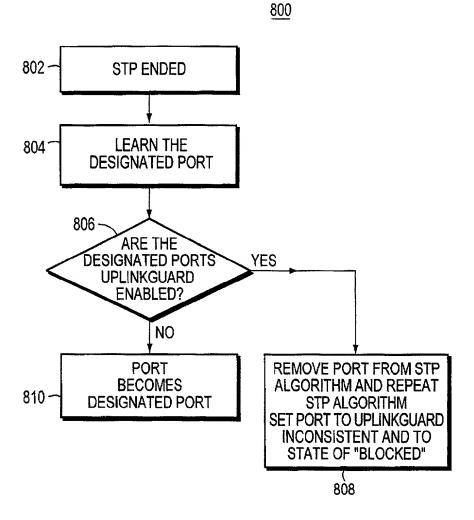


FIG. 8

## 9,000

	910 }	912	913 {
	STATE	ROLE	UPLINKGUARD ENABLED
914~	FWD	ROOT PORT	DON'T CARE
916~	FWD	DESIGNATED PORT	NO
918~	BLK	BLOCKED PORT	DON'T CARE
920	BLK	UPLINK GUARD ENABLED BACKUP FOR ROOT PORT	DON'T CARE
922_	UPLINKGUARD INCONSISTENT = BLK	DESIGNATED	YES

PORT STATE TABLE

FIG. 9

+

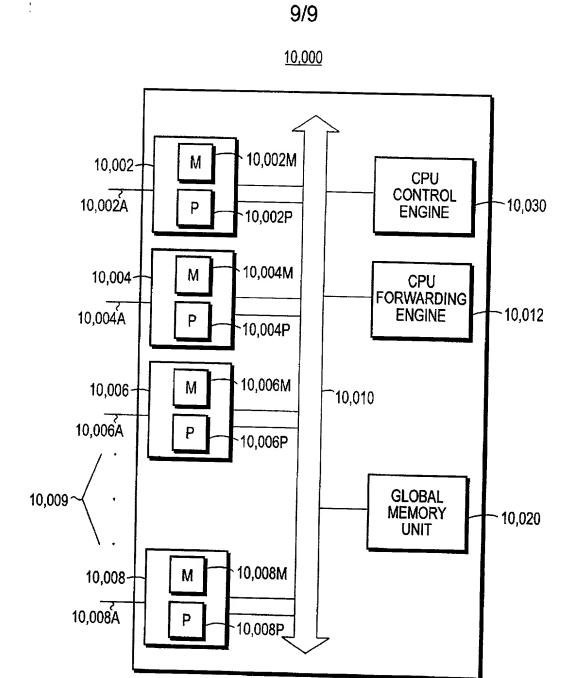


FIG. 10